



NIMBUS CRUISER INSTRUCTIONS FOR X7, X8, AND X8 PRO

Screen Fault Code Definition:

Fault display A: Communication fault between instrument and controller

Fault display B: Accelerator fault

Fault display C: Motor Hall fault

Menu Settings Definitions:

Item	Function	Parameter Description
P0	Km / Mi Selection	Mile: 1
P1	Cruise Setting	Cruise: 1
P2	Autostart Setting	Min. speed autostart: 1
P3	Wheel Diameter Selection	10-inch: 10
P4	Speed setting of Max Gear	Max speed 25km/h: 25

Setting Method:

1. Press the power button and the function key at the same time to enter the menu setting, and the screen will display "P0".
2. Press the function key to select the setting item from P0 - P4.
3. Press the power button to enter the P* setting.
4. Press the function key to set the required values, as shown in the table above.
5. Press the power button to exit the P* setting item.
6. Press the power button and the function button at the same time to exit the menu setting.

